



HAIDAR TECHNOLOGY, LLC.
The Next Generation Of Intelligent Embedded GUI Systems

WWW.haidartecchnology.com

(614) 389-3022

Sales@haidartecchnology.com

GLC-M31

Graphical User Interface Serial LCD Controller
for monochrome Graphic Displays with NJU6676 or
compatible graphic controller

Revision 2.00

Issue Date: 9/19/2009

© Copyright Haidar Technology 2007-2009

Important Notice:

Haidar Technology products are not designed, intended, authorized, or warranted to be suitable for use in life-support applications, devices, or systems, or in other critical applications. Haidar Technology and the buyer agree that Haidar Technology will not be liable for incidental or consequential damages arising from the use of Haidar Technology products. It is the user's responsibility to protect life and property against incidental failure. Haidar Technology reserves the right to make changes and improvements to its products without providing notice

1- Overview:

GLC-31 is a powerful, low cost Graphical User interface Serial LCD Controller. It is capable of controlling/driving any monochrome graphic display (like Optrex F-51851 and F-51852) with New Japan Radio NJU6676 or compatible graphic controller and up to 240X64 resolution. It is based on a powerful 8-bit microcontroller "PIC18F4620" running at 10 MIPS with 3986 bytes of RAM and 64K of flash memory. The firmware is written to eliminate the need for dynamic memory assignment or floating point math routines and to optimize the speed and reliability, which makes this controller (module) ideal for 24/7 operation.


GLC-M31 also includes a digitally controlled DC/DC converter for the LCD Negative/Positive bias (Contrast Control), digitally controlled low drop voltage regulator for the LCD back light LED (Brightness Control), 512Kbytes of EEPROM for fonts/bitmaps and GUI storage, and a 4-wire resistive touch screen controller. The small size of GLC-M31 (smaller than standard credit card!) and its powerful hardware and firmware features allow for easy integration into your legacy or new product as piggy-back board with minimum hardware/firmware changes to your product.

Graphic displays are very complex devices, they require a lot of memory and processing power. This will add a huge load to the host processor (memory and bandwidth). Also, hundreds of development hours are required to master the display graphic controller, drawing graphic primitives, editing fonts and bitmaps, and handling the touch screen. With GLC-M31, you will spend your time on the main application not on tedious graphic programming and create intuitive GUI application in matter of hours not weeks or even months.


2- Features:

- RS232/RS422 TTL interface
- Support for RS422/485 interface
- Drive displays with on or two graphic controllers (master/slave mode)
- External stable power supply for V1 to V5
- 512Kbytes of EEPROM for fonts/bitmap and GUI program (Up to 24 screens) storage
- Graphical Button Object (One bitmap for the Pressed State and other for Unpressed state)
- Vector/Point Chart Type
- Reverse/Normal Display Mode
- Single Object Command to fill the Chart Object (Array Command)
- Huge Digits (64X128) for the NumberBox Object
- Image Memory Location can be used for the extra 64 32X32 bitmaps and the Huge NumberBox object digit bitmaps
- TextBox and Label can be set to act as TextField object
- Software controlled contrast
- Software controlled brightness
- Software controlled backlight ON/OFF
- 4 wire resistive touch screen controller
- Programming mode allows for direct access to the module EEPROM
- 3 analog inputs and horizontal scanning signal for chart update (oscilloscope mode)
- Output signals for Alarm, Buzzer, Heartbeat and communication status
- Two modes of operation: Terminal and Object mode
- 6 proportional fonts
- 8 Precoded Text Objects (Label, Frame, TextBox, TextField, Button, RadioButton, CheckBox)
- 4 Precoded Primitive Objects (Line, Circle, Ellipse, Rectangle)
- 3 Precoded Picture Objects (Bitmap, ImageSeq, Animation)
- 5 Precoded HMI Objects (Chart, BarGraph, NumberBox, LinearGage, Slider)
- Touch screen calibration algorithm

3- Pin Diagram:

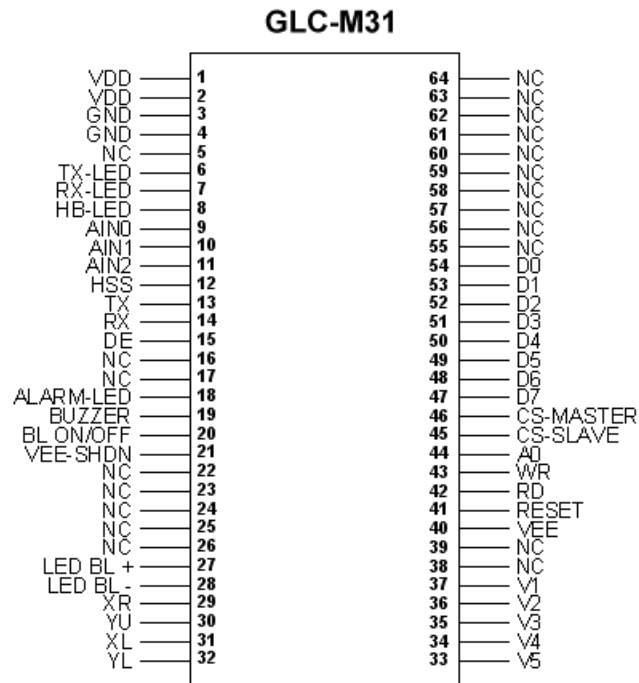

4- Dimensions:

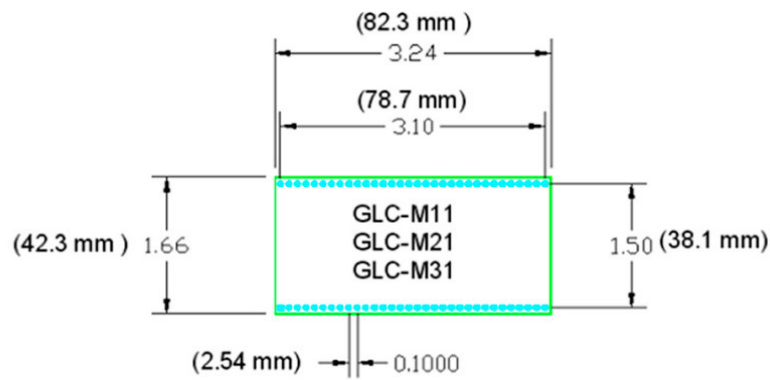

5- Pins descriptions:

Pin Name	Pin Number	Pin Type	Description
VDD	1,2	PWR	Positive supply (+ 5V)
GND	3,4	PWR	Ground reference
TX-LED	6	O (TTL)	Transmitter LED status. A LED with limiting resistor can be connected to the pin for visual transmitter status. Every time the module sends data, the LED will flash.
RX-LED	7	O (TTL)	Receiver LED status. LED with limiting resistor can be connected to this pin for visual receiver status. Every time the module receives data, the LED will flash.
HB-LED	8	O (TTL)	Heart Beat LED status. LED with limiting resistor can be connected to this pin for visual heart beat indicator. The LED will flash at constant rate indicating that the module is running normally.
AIN0	9	I (Analog)	Analog input 0
AIN1	10	I (Analog)	Analog input 1
AIN2	11	I (Analog)	Analog input 2
HSS	12	I (TTL)	Horizontal Scanning Signal for chart update in oscilloscope mode
TX	13	O (TTL)	RS232 Transmitter
RX	14	I (TTL)	RS232 Receiver
DE	15	O (TTL)	RS422/485 Data Enable
Alarm-LED	18	O (TTL)	This output is used as a general visual alarm controlled via software. LED with limiting resistor can be connected to this pin.
Buzzer	19	O (TTL)	This output is used as a general audible alarm or touch controlled via software. Buzzer or speaker with proper current sink can be connected to this pin.
BL ON/OFF	20	O (TTL)	This output signal is used to turn the display CCFL backlight ON/OFF by turning the CCFL high voltage ON/OFF via a transistor or MOSFET.
VEE-SHDN	21	O (TTL)	This output signal is used to turn the LCD bias DC/DC converter ON or OFF. Leave this Pin unconnected
LED-BL+	27	O (PWR)	Connect this pin to the display LED backLight positive terminal
LED-BL-	28	O (PWR)	Connect this pin to the display LED backlight negative terminal
XR	29	I/O	Touch screen X Right
YU	30	I/O	Touch screen Y Upper
XL	31	I/O	Touch screen X Left
YL	32	I/O	Touch screen Y Lower
VEE	40	O (Analog)	LCD negative bias
RESET	41	O (TTL)	LCD Reset signal
RD	42	O (TTL)	LCD Read signal
WR	43	O (TTL)	LCD Write signal
A0	44	O (TTL)	LCD Command/Data select signal
CS-Master	46	O (TTL)	LCD Master Chip Select Signal
CS-Slave	45	O (TTL)	LCD Slave Chip Select Signal
D7 – D0	47 - 54	I/O (TTL)	LCD Data Bus
V5 – V1	33 - 37		LCD driving voltages
NC			No Connection. Leave these pins open

6- Electrical Characteristics:

Recommended Operation Conditions

Symbol	Parameter	Condition	Min	Typ	Max	Unit
VDD	Supply voltage	GND = 0 V	4.5	5.0	5.5	V
VAIN	Analog input voltage	GND = 0 V	0	5.0	5.5	V
VLED	Supply voltage for LED backlight	GND = 0 V	1.6		3.5	V
ILED	Supply current for LED backlight		0	350	500	MA
VEE	Supply negative voltage		-20		-12	V
VOH	High level output voltage	GND = 0 V TTL level	VDD- 0.4			V
VOL	Low level output voltage	GND = 0 V TTL level			0.8	V
VIH	High level input voltage	GND = 0 V TTL level	2.0			V
VIL	Low level input voltage	GND = 0 V TTL level			0.8	V

7- Modes of Operation:

7-1- Terminal Mode:

The terminal mode commands can be used at any time by the host controller to configure or control the module/LCD. In this mode, the host controller is responsible for creating the graphical user interface and response to the user touch using the provided commands. The terminal mode commands are divided into 3 groups:

- Configuration and Control
- Graphics and Text
- Touch screen

The terminal commands will be discussed in details latter in this manual.

GooyLCD IDE provides 7 utilities (Terminal, Contrast, Brightness, Alarm, Buzzer, and Touch screen, Configure Module) to examine to function of these commands.

7-2- Object Mode:

In this mode of operation, the user will be able to create his or her graphical user interface application visually and screen by screen (up to 24 screen) using GooyLCD IDE. The building blocks of the GUI application are precoded GUI, Graphics and HMI objects. Each object has a design time and run time properties. The host controller will be able to control and manage the objects on the screen using the object mode commands which they change the run time properties of the objects.

The object commands will be discussed in details later in this manual.

8- EEPROM:

The module has 512Kbytes of external EEPROM for Fonts, bitmaps, and images and GUI program storage. The external EEPROM is divided into four chips each one has 128Kbytes:

- Fonts/Bitmaps EEPROM : store fonts, bitmaps and images
- GUI1 EEPROM : store GUI Program screen 0 to 7
- GUI2 EEPROM: store GUI program screen 8 to 15
- GUI3 EEPROM: store GUI program screen 16 to 23

To prevent an accidental write to the EEPROM during normal operation, set the DIPswitch to WP.

9- Programming Mode:

The programming mode is used to program the blank controllers without the need for LCD. **In this mode, the controller will automatically configured to 115.2kb/sec baud rate and [16] device ID (Comm address), the firmware will skip the LCD initialization routine.** The programming mode provides a direct access to the module EEPROM for reading or writing operation.

After you finish from your GUI program including fonts, bitmaps and images, you can make an exact copy of your program by reading the module EEPROM and save it to HEX files. Those files will be the your master files to program the other blank module by writing them to their EEPROM.

To enter the programming mode:

- 1- Turn off the module and the display
- 2- Disconnect the display
- 3- Set the DIP switch to PM
- 4- Turn On the module

10- Display Interface:

GLC-M31 is capable of driving/controlling any monochrome graphic display with the following specifications:

1. NJU6676 or S1D10605 graphic controller built in
2. One controller or two (Master/Slave mode)
3. 240X64 or 128X64 resolution

The data bus (D0-D7), control bus (RD, WR, A0, CS-Master, CS-Slave, RESET) and (V1 – V5) must be connected the display corresponding pins. Leave CS-Slave unconnected if your display has only one controller.

11- Communication Interface:

A simple RS232 or RS422/485 serial interface is implemented to communicate with the host controller or the PC. Three pins are provided for this interface:

- TX: Transmitter (TTL Level)
- RX: Receiver (TTL Level)
- DE: Data Enable (TTL Level)

DE (active high) is used to implement RS422/485 serial communication and is used to turn the transmitter ON only during transmission.

RS232 settings are:

- 8 bit data
- 1 start bit
- 1 stop bit
- No parity
- No flow control

The baud rate is user defined (default is 19200 bit/sec) and it can be set to one of the followings values:

9600 bit/sec
19200 bit/sec
38400 bit/sec
57600 bit/sec
115200 bit/sec

The communication protocol is a simple ACK/NAK protocol with the following format:

- Command format

Device ID
LB
CMD
Data Field
CS

- ACK format

Device ID
ACK Code
LB
Data Field
CS

- NAK format

Device ID
NAK Code
CS

Higher baud rate than 19.2 kb/sec can cause communication problems (not fully tested).
 19.2 kb/sec is fully tested and it is suitable for most applications.
 115.2 kb/sec is also fully tested and only can be used in the programming mode

Where:

- Device ID: is the module communication address (default is 0x10)
- LB: is the number of bytes to follow excluding the check sum (CS)
- CMD: is the command code
- CS: is the check sum and is the LS byte of the summation of all the bytes in the packet
- ACK code = 0x06
- NAK code = 0x15

You will receive a NAK if:

- Command is not in the list
- Wrong number of command arguments
- Invalid argument

12- Fonts

GLC-Mxx can write text in six different user editable proportional fonts. Characters can be placed at any pixel in the view area of the display. Proportional fonts have more advantages over mono spaced fonts, they are easier to read and they save more space, which make them ideal for small, low resolution displays. Each font has 128 character set [ASCII codes (0x20 – 0x9F)]. ASCII codes from 0x00 to 0x1F must not be used.

Font name	Cell Size	Font Code	Number of Characters
Font1	8X8	1	128
Font2	8X8	1	128
Font3	8X16	3	128
Font4	8X16	4	128
Font5	16X24	5	128
Font6	16X24	6	128

13- Touch Screen:

GLC-Mxx modules use Texas Instruments TSC2003 as 4 wires resistive touch screen controller. It features a 12-bit accuracy; touch pressure measurement and hardware interrupt “PENIRQ”. A firmware algorithm “TSControl” is implemented to measure and correct the touch data (X, Y, Z1, Z2 and TStatus) and calibrate the touch screen.

1. Modes of operation:

TSControl is controlled through the “TSConfigByte” and can operate in one of these modes:

- Interrupt, touch data are sent on request (Mode 0): Every time the user touches the touch screen, an interrupt is generated at the falling edge of “PENIRQ”. Touch data are measured and saved in the touch data buffer to be read by the host controller using the command “Get Touch Data”
- Interrupt, touch data are sent on every interrupt (Mode 1): Every time the user touches the touch screen, an interrupt is generated at the falling edge of “PENIRQ”. Touch data are measured and sent to the host controller.

- Continuous, touch data are sent every 100 msec (Mode 2): In this mode, TSControl is continuously scanning the touch screen every 100 msec, touch data are measured and sent to the host controller every 100 msec. You can stop sending the touch data by setting the “TSConfigByte” to Mode 3
- Continuous, touch data are sent on request (Mode 3): This mode also is the “Object Touch Mode” and it is the default mode. Tscontrol is continuously scanning the touch screen every 100 msec, touch data are measured and saved in the touch data buffer to be read by the host controller using the command “Get Touch Data”.

2. Calibration:

Several sources of errors affect the X and Y coordinates produced by the touch screen. The most important sources of error are electrical noise, mechanical misalignments, non-linearity, and scaling factors. The calibration algorithm permits the elimination of the scaling factors and mechanical misalignments of the touch screen.

The challenge of the calibration algorithm is to translate the set of coordinates reported by the touch screen into a set of coordinates that accurately represent a point on the display.


$$[X_d, Y_d] = f([X_t, Y_t])$$

Where:

X_d, Y_d : are the display coordinates

X_t, Y_t : are the coordinates reported by the touch screen

f : is calibration algorithm function

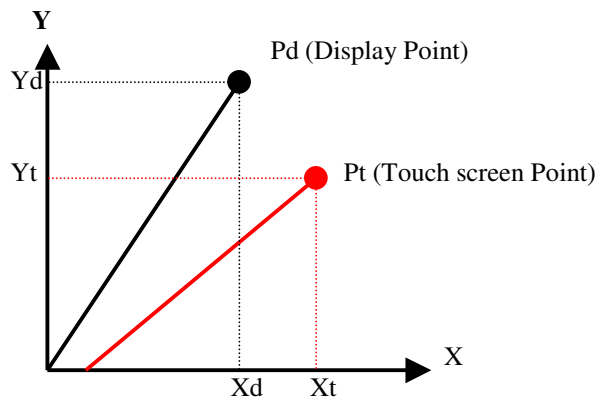

The above figure shows three factors of errors:

- Rotation of touch screen coordinates relative to the display coordinates
- Linear shift of coordinates
- A scaling factor

In this case, the calibration algorithm needs to calculate six calibration coefficients (3 point calibration algorithm). The corrected touch screen coordinates are calculated from following expressions:

$$\begin{aligned} X_d &= A(X_t) + E(Y_t) + B \\ Y_d &= C(X_t) + F(Y_t) + D \end{aligned}$$

But, if we assume the rotation error (tilting) is too small ($E = F = 0$), then the calibration algorithm needs only to calculate four calibration coefficients (2 points calibration algorithm) reducing the expressions to:

$$\begin{aligned} X_d &= A(X_t) + B \\ Y_d &= C(X_t) + D \end{aligned}$$

Where:

A, B, C, and D are the calibration coefficients or constants.

TSControl uses a two points calibration algorithm to calibrate the touch screen. There is no need to calibrate the touch screen every time the device is powered on. The calibration constants are saved in the internal EEPROM and they will restore after power on.

The calibration procedure is as following:

After you send “CAL TS” command to the module, the screen will be cleared and a small circle will appear at the upper left corner of the display (P1). Touch this circle with a stylus and remove your hand. The circle will disappear and another circle will appear at the other opposite corner (P2). Again touch this circle with a stylus and then remove your hand. The circle will disappear and the touch screen calibration is done.



3. Touch Pressure:

TSC2003 provides a mean to measure the touch pressure by measuring the two components Z1 and Z2. Touch pressure can be used to differentiate between a finger touch or stylus touch and it can be calculated from the following formula:

$$\text{Touch Pressure} = \text{Rx-plate} * (\text{Xt} / 4096) * (\text{Z2} / \text{Z1} - 1)$$

For relative measurement of the touch pressure, you can assume Rx-plate = 1 and the relative touch pressure will be:

$$\text{Relative Touch Pressure} = (\text{Xt} / 4096) * (\text{Z2} / \text{Z1} - 1)$$

Where:

Xt: is the touch X coordinate (Uncorrected TSCConfigByte <R/C> = 0).

4. TSCConfigByte: Touch Screen Configuration Byte

7	6	5	4	3	2	1	0
M1	M0	R/C	Z	A	AV1	AV0	E

Bit0: Enable

0 = Touch screen controller is disable

1 = Touch screen controller is enable

Bit1,2: Touch Screen data average select

00 = No average

01 = 4 samples average

10 = 8 samples average

11 = 16 samples average

Bit3: Audible Touch (only available for Mode 0 and 1)

0 = Silence touch

1 = Audible touch

Bit4: Measure Z1 and Z2

0 = Do not measure Z1 & Z2

1 = Measure Z1 & Z2

Bit5: Send Raw or Corrected data

0 = Send Raw data

Important Notes:

1. In order to calibrate the touch screen, the “TsConfigByte” must be set as following:

E = 1

AV1-AV0 = 2

A = 0

Z = 0

R/C = 1

M1-M0 = 3 (Mode 3)

The above setting are the default settings upon power up.

2. In the current firmware, the touch screen data average is fixed to 8 samples average.

1 = Send Corrected Data

Bit6,7: Mode select

00 = Interrupt mode, data are sent on request (using "Get TS Data" command)

01 = Interrupt mode, data are sent on every touch

10 = Continuous mode, data are sent every 100 msec

11 = Continuous mode (Object Touch mode), data are sent on request

5. Tstatus: Touch Status

TStatus							
7	6	5	4	3	2	1	0
-	-	-	DT	IT	OT	ST	CIP

Bit0: Touch screen calibration in progress

0 = Normal operation

1 = Calibration in progress

Bit1: Screen Touch

0 = Screen is not being touched

1 = Screen is being touched

Bit2: Object Touch

0 = Object is not being touched

1 = Object is being touched

Bit3: Increment Touch (ListBox increment bitmap)

0 = Increment ListBox bitmap is not being touched

1 = Increment ListBox bitmap is being touched


Bit4: Decrement Touch (ListBox decrement bitmap)

0 = Decrement ListBox bitmap is not being touched

1 = Decrement ListBox bitmap is being touched

14- Screen Origin:

The screen origin (0,0) is the upper left corner of the display.

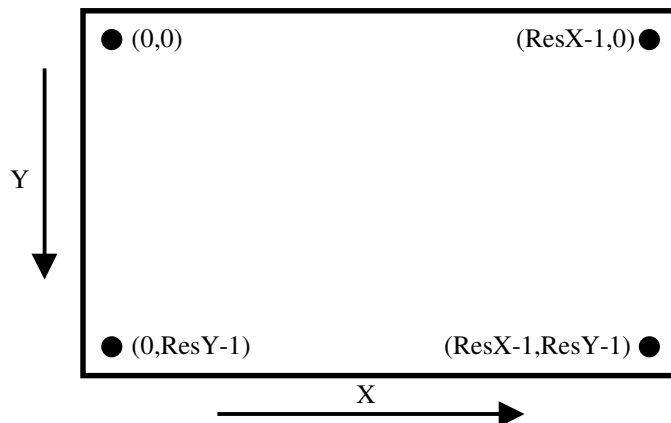

15- Terminal Commands:

- **RESET**

This command is used to RESET the module to its initial settings and it is equivalent to a hardware reset

CMD Code	0x01
CMD format	DVID,0x01,0x01,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

- **Set Configuration**

This command is used to write 16 configuration bytes to the module. A software or hardware reset is required after sending this command for the new configuration to take place.

CMD Code	0x05
CMD format	DVID,0x11,0x05, [16 configuration bytes B0 – B15], CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

Configuration bytes

0	Device ID
1	ConfigByte
2	Baud Rate
3	0
4	LCDResX_H
5	LCDResX_L
6	LCDResY_H
7	LCDResY_L
8	0
9	0
10	0
11	APU-BL
12	APU-SS
13	0x00
14	0x00
15	0x00

LCDResX_H&LCDResX_L: LCD Horizontal Resolution

LCDResY_H&LCDResY_L: LCD Vertical Resolution

Note: Max LCD resolution is 240X128 (default)

ConfigByte: Controller Configuration Byte

ConfigByte Bit #	Description
0	TouchScreen Controller Enable/Disable 1: Enable 0: Disable (Default)
1	LCD Mode Select (Normal/Reverse) 1: Reverse 0: Normal (Default)
2	Use Image Memory Location 1: For the extra 64 32X32 bitmaps and the 23 huge digits bitmaps 0: For Images (Full screen bitmaps) (Default)
3	NA
4	NA
5	NA
6	NA
7	NA

BR-SEL: Baud Rate Select

BR-SEL	Baud Rate
0	9600 bit/sec
1	19200 bit/sec
2	38400 bit/sec
3	57600 bit/sec
4	115200 bit/sec

APU-BL: At Power Up, Backlight is ON or OFF

APU-BL	Backlight
0	OFF
1	ON

APU-SS: At Power Up, Display Splash Screen (Image ID = 0)

APU-SS	Splash Screen
0	NO
1	Yes

- **Get Module Info**

This command is used to get the module serial number, product number and firmware version.

CMD Code	0x02
CMD format	DVID,0x01,0x02,CS
ACK format	DVID,0x06,0x10,[16 bytes info B0-B15],CS
NAK format	DVID,0x15,CS

0	PN1
1	PN2
2	PN3
3	PN4
4	PN5
5	PN6
6	SN1
7	SN2
8	SN3
9	SN4
10	SN5
11	SN6
12	FV1
13	FV2
14	FV3
15	FV4

PN: Product Number (6 CHR)

SN: Serial Number (6 CHR)

FV: Firmware Version (4 CHR)

- **Set LCD Mode**

This command is used to turn the display ON or OFF and to change the display mode from Normal to Reverse.

CMD Code	0x06
CMD format	DVID,0x02,0x0D, Control Byte ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

Control Byte

7	6	5	4	3	2	1	0
x	x	x	x	x	x	LCD Nor/Rev	LCD ON/OFF

Bit0: LCD ON/OFF

0 = LCD OFF

1 = LCD ON

Bit1: LCD Nor/Rev

0 = Normal mode

1 = Reverse mode

• Adjust Contrast

This command is used to adjust the display contrast level. A value from 0 to 255 can be used as a contrast level. This value will be saved in the digital POT EEPROM so it will survive power down or a reset.

CMD Code	0x15
CMD format	DVID,0x02,0x15, Contrast Level ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

• Adjust Brightness

This command is only can be used for displays with LED backlight. It is used to adjust the brightness of the display by controlling the voltage drop across the backlight LED. A value from 0 to 255 can be used as brightness level. This value will be saved in the digital POT EEPROM so it will survive a power down or a reset.

CMD Code	0x16
CMD format	DVID,0x02,0x16, Brightness Level ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

• Backlight ON/OFF

This command is used to turn the display backlight ON or OFF.

Control Byte = 0 => Backlight is OFF

Control Byte = 1 => Backlight is ON

CMD Code	0x1C
CMD format	DVID,0x02,0x1C, Control Byte ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

• Set Alarm

This command is used to set the visual and audible alarm.

CMD Code	0x17
CMD format	DVID,0x02,0x17, Alarm Mode ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

Alarm Mode

7	6	5	4	3	2	1	0
Aud_alarm	x	x	x	x	x	M1	M0

Bit7: Audible Alarm

0 = No audible alarm (only visual alarm)

1 = audible and visual alarm

Bit1-0: Alarm Mode Select (M1-M0)

00 = Alarm is OFF (Both audible and visual)

01 = Alarm is ON Solid

10 = Alarm is ON Flashing Slow

11 = Alarm is ON Flashing Fast

- **Beep**

This command is used to activate (beep) the buzzer for certain number of msec indicated by Beep-Time. A value from 0 to 255 msec can be used for the Beep-Time.

CMD Code	0x18
CMD format	DVID,0x02,0x18, Beep-Time ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

- **Clear Screen**

This command is used to clear the entire screen text and graphics.

CMD Code	0x0B
CMD format	DVID,0x01,0x0B,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

- **Draw Pixel**

This command is used to place (draw) a pixel at (X,Y) coordinates.

CMD Code	0x0C
CMD format	DVID,0x04,0x0C,X,Y,Visible ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

X: 0 to LCDResX – 1

Y: 0 to LCDResY – 1

Visible: 0 = The pixel is not visible (clear the pixel)

1 = The pixel is visible (draw the pixel)

- **Draw Line**

This command is used to draw a line from P1(x1,y1) to P2(x2,y2)

CMD Code	0x0D
CMD format	DVID,0x07,0x0D,X1,Y1,X2,Y2,Visible,DrawStyle,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

X1: 0 to LCDResX – 1

Y1: 0 to LCDResY – 1

X2: 0 to LCDResX – 1

Y2: 0 to LCDResY – 1

Y1 must be equal or greater than Y2

Visible: 0 = The Line is not visible (clear the line)

1 = The Line is visible (draw the line)

DrawStyle: see Draw style table

- **Draw Circle**

This command is used to draw a circle with radius (Ra) and centered at (X0,Y0).

CMD Code	0x0F
CMD format	DVID,0x06,0x0F,X0,Y0,Ra,Visible,FillStyle ,CS

ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

X0: 0 to LCDResX –1

Y0: 0 to LCDResY – 1

Ra: 0 to 255 (circle radius must be less than LCDResX –1 and LCDResY – 1)

Visible: 0 = The Circle is not visible (clear the circle)

1 = The Circle is visible (draw the Circle)

FillStyle: see fill style table (only FillStyel 0 and 1 are available for this command)

• Draw Ellipse

This command is used to draw an ellipse with X radius (Ra), Y radius (Rb) and centered at (X0,Y0).

CMD Code	0x10
CMD format	DVID,0x07,0x10,X0,Y0,Ra,Rb,Visible,FillStyle ,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

X0: 0 to LCDResX –1

Y0: 0 to LCDResY – 1

Ra,Rb: 0 to 255 (Ra and Rb must be less than LCDResX –1 and LCDResY – 1)

Visible: 0 = The Ellipse is not visible (clear the Ellipse)

1 = The Ellipse is visible (draw the Ellipse)

FillStyle: see fill style table (only FillStyel 0 and 1 are available for this command)

• Draw Rectangle

This command is used to draw a rectangle with upper left corner (x1,y1) and lower right corner (x2,y2).

CMD Code	0x0E
CMD format	DVID,0x08,0x0E,X1,Y1,X2,Y2,Visible,DrawStyle,FillStyle,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

X1: 0 to LCDResX – 1

Y1: 0 to LCDResY – 1

X2: 0 to LCDResX – 1

Y2: 0 to LCDResY – 1

X2 > X1

Y2 > Y1

Visible: 0 = The Rectangle is not visible (clear the rectangle)

1 = The Rectangle is visible (draw the rectangle)

DrawStyle: see Draw style table

FillStyle : see Fill style table

Draw Style Table

Draw Style name	Code	
Normal	0x00	—
Bold	0x01	—
Thick	0x02	==
Dot	0x03
Dash	0x04	-----

Fill Style Table

Fill Style name	Code	
Transparent	0x00	
Solid	0x01	
Horizontal lines	0x02	
Vertical lines	0x03	
Cross	0x04	
Blank (Clear inside)	0x05	

• **Write Text**

This command is used to write one line of text starting at (X,Y) and with the selected Font.

CMD Code	0x11
CMD format	DVID, LB, 0x11, X, Y, Font, Asc1, Asc2, AscN, CS
ACK format	DVID, 0x06, 0x00, CS
NAK format	DVID, 0x15, CS

X: 0 to LCDResX – 1

Y: 0 to LCDResY – 1

Font: see Font table below

Font name	Cell Size	Font Code	Number of Characters
Font1	8X8	1	128
Font2	8X8	2	128
Font3	8X16	3	128
Font4	8X16	4	128
Font5	16X24	5	128
Font6	16X24	6	128

Asc1..AscN: Characters Ascii codes

N: is the number of characters (N <= 40)

LB = 6 + N

Example: To write “Hello” to the screen at (0,0) with Font 1

CMD Format = DVID, 0x09, 0x11, 0x00, 0x00, 0x00, 0x00, 0x01, 0x48, 0x65, 0x6C, 0x6C, 0x6F, CS

X Y Font1 H e l l o

• **Show Bitmap**

This command is used to show (display) a bitmap or image already saved in the module EEPROM starting at (X,Y).

CMD Code	0x12
CMD format	DVID, 0x05, 0x12, X, Y, BMCode, BMID, CS
ACK format	DVID, 0x06, 0x00, CS
NAK format	DVID, 0x15, CS

X: 0 to LCDResX – 1

Y: 0 to LCDResY – 1

BMCode: Bitmap Code (see bitmap table)

BMID: Bitmap ID number

Bitmap Table

Bitmap Size/Name	Code	ID
Image	0x01	0 - 15
64X64	0x02	0 - 31
48X48	0x03	0 - 31
32X32	0x04	0 - 31
24X24	0x05	0 - 31
16X16	0x06	0 - 31
8X8	0x07	0 - 31
8X16	0x08	0 - 31
16X8	0x09	0 - 31
32X16	0x0A	0 - 31
16X32	0x0B	0 - 31
Extra 32X32	0x0C	0 - 63
Digit Small	0x14	0 - 23
Digit Medium	0x15	0 - 23
Digit Big	0x16	0 - 23
Digit Huge	0x17	0 - 23

- **Config TS**

This command is used to configure the touch screen by writing to the touch screen configuration byte.

CMD Code	0x19
CMD format	DVID,0x02,0x19,TSConfigByte,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

- **CAL TS**

This command is used to calibrate the touch screen. Two points touch screen calibration algorithm is used.

CMD Code	0x1B
CMD format	DVID,0x01,0x1B,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

- **Get Touch Data**

This command is used to read the touch coordinates and status.

CMD Code	0x1A
CMD format	DVID,0x01,0x1A,CS
ACK format	DVID,0x06,0x09,TX_H,TX_L,TY_H,TY_L,TZ1_H,TZ1_L,TZ2_H,TZ2_L,TStatus,CS
NAK format	DVID,0x15,CS

TX_H&TX_L: Touch X coordinate

TY_H&TY_L: Touch Y coordinate

TZ1_H&TZ1_L: Touch Z1 value

TZ2_H&TZ2_L: Touch Z2 value

H: MSB

L: LS

- **Get CAL Constants**

This command is used to read the calibration constants that being calculated after a successful touch screen calibration. The CAL constants are saved into the controller EEPROM and they will restore on power-on.

CMD Code	0x1D
CMD format	DVID,0x01,0x1D,CS
ACK format	DVID,0x06,0x08,A_H,A_L,B_H,B_L,C_H,C_L,D_H,D_L,CS
NAK format	DVID,0x15,CS

A_H&A_L: Cal constant A

B_H&B_L: Cal constant B

C_H&C_L: Cal constant C

D_H&D_L: Cal constant D

16- Objects overview:

Objects are the building blocks for any graphical user interface application. A list of 20 precoded objects is included to ease the GUI application development. Each object has a unique Code and ID number, both numbers are assigned automatically by the GooyLCD IDE. The number of objects that can be added to a screen is limited by ObjRAM (Object RAM) and the LCD view area. The following table shows the object codes and the maximum number per screen.

Object Name	Code	Max/Screen	ID Range
Screen	-	-	0 - 23
Form	0x01	5	0 - 4
Label	0x02	10	0 - 9
TextBox	0x03	8	0 - 7
CheckBox	0x04	8	0 - 7
Button	0x05	16	0 - 15
RadioButton	0x06	8	0 - 7
TextField	0x07	16	0 - 15
ListBox	0x08	1	0
Bitmap	0x0A	16	0 - 15
Line	0x0B	16	0 - 15
Circle	0x0C	8	0 - 7
Ellipse	0x0D	8	0 - 7
Rectangle	0x0E	16	0 - 15
ImageSeq	0x0F	8	0 - 7
Animation	0x10	8	0 - 7
BarGraph	0x14	8	0 - 7
Chart	0x15	3	0 - 2
NumberBox	0x16	8	0 - 7
LinearGage	0x17	8	0 - 7
Slider	0x18	8	0 - 7

The object properties are divided into two groups:

- **Design-time Properties:** Each object has its own design (development) time properties, some of them can be also available at run time. These properties are fully customized through the Object property window (see "GooyLCD IDE user manual for more information). The following table describes all design time properties:

Property name	Description
Code	Object code
ID	Object ID
X	Object position X coordinate
Y	Object position Y coordinate
Width	Object width in pixels
Height	Object height in pixels
BStyle	Object boarder style
Font	Object font
MaxLenght	Object maximum number of characters
TextOffset	Object text offset
NOItem	Object number of items
BMCode	Bitmap code
BMID	Bitmap ID
P1(X1,Y1)	Object drawing Point 1
P2(X2,Y2)	Object drawing Point 2
Ra	Object radius Ra

Rb	Object radius Rb
NOImage	Object number of images
ConfigByte	Object configuration byte
NOTick	Object number of ticks
TickFreq	Object ticks frequency
Visible	Object is visible/unvisible (available at Run time)
DrawStyle	Object Draw style (available at Run time)
FillStyle	Object Fill style (available at Run time)
Text	Object text (available at Run time)
Cursor	Cursor is enabled or disabled (available at Run time)

- Run Time Properties: Each object also has its own Run Time properties. The object commands are used by the host controller to update the object run time properties.

Examples:

Let us assume that Screen0 is already loaded and you need to change the caption of a Label. The label code is “2” and its ID is “5”.

To change the label caption to “Error”, your host controller needs to send the object command “Text” as following:

Send_ObjCmd_Text(0x02, 0x05, “E”, “r”, “r”, “o”, “r”)

To update a BarGraph with ID = 1 to new value (0x40):

Send_ObjCmd_Value(0x14, 0x01, 0x40)

To read the BarGraph status byte

Send_ObjCmd_Status(0x14,0x01)

To Redraw an Animation (ID = 1)

Send_ObjCmd_Trigger(0x10,0x01)

To change a button (ID = 1) state to Unpressed

Send_ObjCmd_Click(0x05,0x01,0x00)


The following table describes all runtime properties and the objects how use them.

Property Name	Object	Description
HighLight	Label, TextBox, CheckBox, RadioButton, Button, Bitmap	To highlight or unhighlight text or graphics (Bitmap)
Visible	All objects except TextField, Animation, ListBox	To show or hide an object
Check	CheckBox, RadioButton	To switch between checked and unchecked states
Click	Button	To switch between clicked and unclicked states
Cursor	TextBox	To enable or disable the cursor
DrawStyle	Line, Rectangle	To change the draw style
FillStyle	Circle, Ellipse, Rectangle	To change the fill style
Pixel	Chart	To update the chart with new pixel(x,y)
Value	BarGraph, ImageSeq, LinearGage Slider	To update an object with a new value
Scroll	ListBox	To scroll up or down
Trigger	Animation	To update an animation
Clear	Label, TextBox, Chart	To clear text or graphics
Status	All Objects	To get an object status
Touch	All Objects except TextField, Animation	To check if an object has been touched
Text	Label, TextBox, NumberBox	To write string or number to an object

17- Objects descriptions:


17.1 Screen:

Screen is not an object, it is a container for the objects shown on the display (like a form in visual programming). The screen has the same resolution as the target display and only one screen can be displayed at any time. A GUI program usually contains more than one screen, the first screen shown after power on is usually the main screen. From this screen, the user will navigate through the entire GUI program. Up to 24 screens can be added to GUI program which, is more than enough for most application. Two object commands are used to load and show or unload and clear a screen. When a screen is loaded, the object parameters are transferred from the controller GUI EEPROM to the ObjRAM and at the same time drawn on the display screen. When a screen is unloaded, the display screen and ObjRAM will be cleared. So it necessary when you load a new screen, to unload the previous one first. Immediately after loading a screen, the host controller needs to initialize the objects (similar to Form_Load method) which can take some time depending on the number of objects and the initialization procedure. If you have complex screens and you like to hide the screens initialization, you can use the terminal command (SetLCDMode) to turn the LCD OFF and then turn it ON after the initialization is done

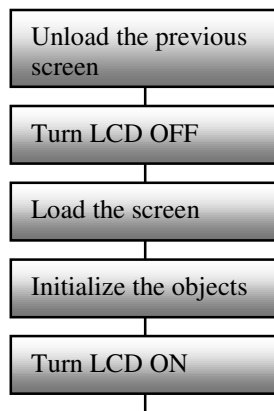

17.2 Label:

Label is used to place text anywhere within the view area of the display. The text is editable at run time. Also, you can set the Label object to act as TextField object (Fixed Text) while you still able to use the other label run time properties

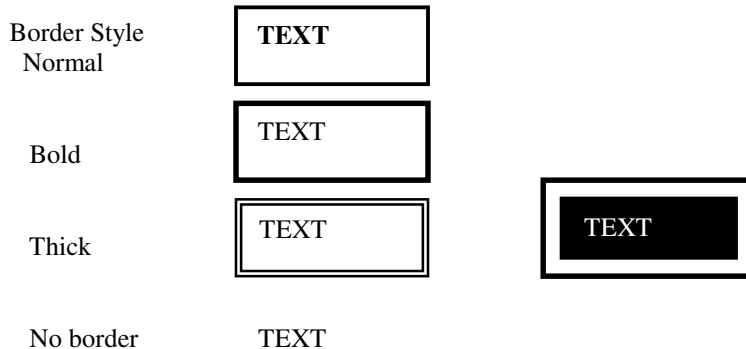

Runtime Properties:

- Highlight
- Text
- Visible
- Touch
- Status

Note: You need to write the Label text every time you need to highlight/unhighlight or hide/show the label.

17.3 TextBox:

TextBox is used to place text anywhere within the view area of the display. It looks and behaves like label except you can enable or disable a vertical text cursor. The text is editable and the cursor can be enabled or disabled at run time. Also, you can set the TextBox to act as TextField (fixed text) while you are still able to use the other TextBox run time properties.



The cursor is 1 pixel wide vertical line, the height of the cursor is automatically adjusted according to the selected font height. Every time a character is added or deleted from a textbox, the cursor moved accordingly (left or right). The cursor does not blink. However, the host controller can use cursor enable/disable to blink the cursor at certain rate and implement “Get Focus, Loss Focus” functions when more than one textbox are shown on the screen.

Runtime Properties:

- Highlight
- Text
- Visible
- Cursor
- Touch
- Status

Note: You need to write the text every time you need to highlight/unhighlight or hide/show a TextBox.

17.4 TextField:

TextField is used to place static text anywhere within the view area of the display screen. The text is not editable at run time. TextField has no runtime properties.

17.5 Button:

Button is a control object used to perform a function or set of functions when is clicked. The Button style can be Standard (windows style with the button caption displayed at the center) or Graphical (one bitmap for Unpressed state and other for Pressed state).

Standard Button



Unclicked State




Clicked State

Graphical Button



Unpressed State

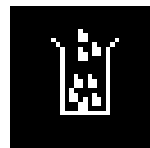

Pressed State

Custom buttons (graphical buttons) can be implemented using Bitmap or ImageSeq object.

Runtime Properties:

- HighLight
- Click
- Visible
- Touch
- Status

17.6 CheckBox:

CheckBox is a special type of button that indicates if a state is true or false (1 or 0). It has two states: Checked (Selected) or Unchecked(Unselected).

Average Data

Average Data

Runtime Properties:

- HighLight
- Check
- Visible
- Touch
- Status

17.7 RadioButton:

RadioButton is also a special type of button that allows the selection of one item in list. The host controller is responsible for grouping an array of radiobuttons into list and insure that each selection clears the previous choice.

CH0

CH1


CH2

Runtime Properties:

- HighLight
- Check
- Visible
- Touch
- Status

17.8 Frame:

Frame is used to display a group of objects under one title.

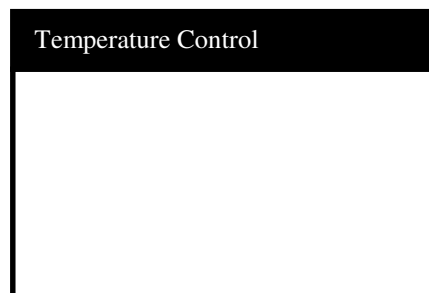


Runtime Properties:

- Visible
- Touch
- Status

17.9 ListBox:

ListBox allows the selection one item from a list. The selected item is highlighted and all items (list) must be visible.

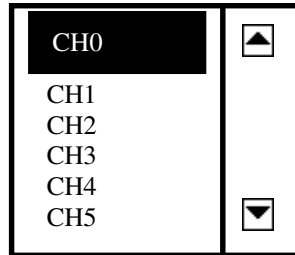

Runtime Properties:

- Scroll
- Status

17.10 Line:

This object is used to place a line anywhere within the view area of the display. Line draw style is editable at run time.




Runtime Properties:

- DrawStyle
- Visible
- Touch
- Status

17.11 Rectangle:

This object is used to place a rectangle anywhere within the view area of the display. Rectangle draw style and fill style are editable at run time.

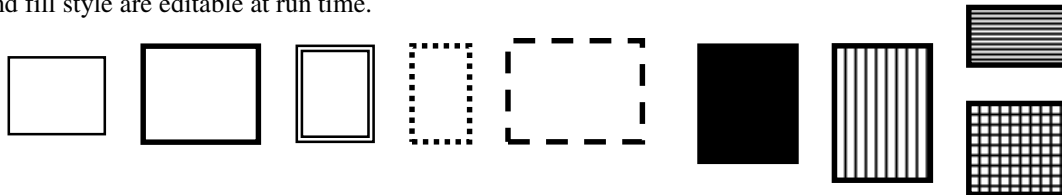

Runtime Properties:

- DrawStyle
- FillStyle
- Visible
- Touch
- Status

17.12 Circle:

This object is used to place a circle anywhere within the view area of the display. Circle fill style is editable at run time.




Runtime Properties:

- FillStyle
- Visible
- Touch
- Status

17.13 Ellipse:

This object is used to place an ellipse anywhere within the view area of the display. Ellipse fill style is editable at run time.

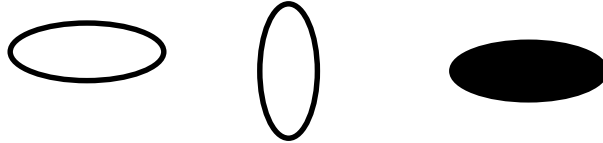


Runtime Properties:

- FillStyle
- Visible
- Touch
- Status

17.14 Bitmap:

This object is used to place a bitmap anywhere within the view area of display. It allows you to create a graphical menu or list, custom button or, flashing warning or alarm.

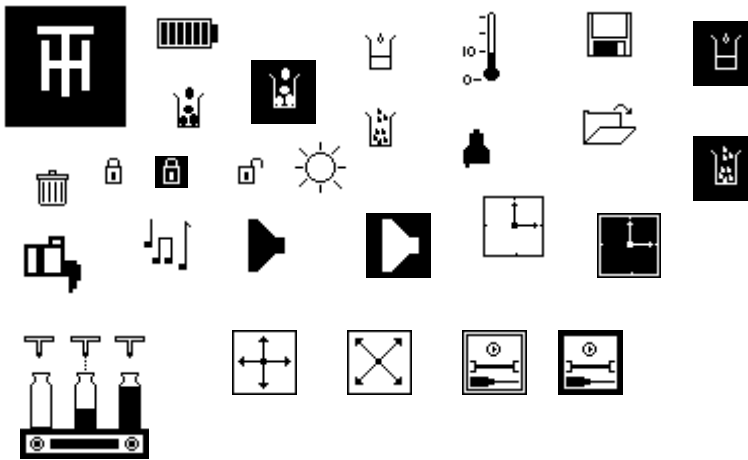








Runtime Properties:

 - HighLight
- Visible
- Touch
- Status



17.15 ImageSequence:

This object is used to display a bitmap from an array of bitmaps stored in sequence in the font/bitmap EEPROM. It allows you to graphically show or monitor a process like charging battery or to implement custom button with two states or more.

Example 1: charging battery

Value	Bitmap
0	
1	
2	
3	
4	
5	
6	

Example 2: custom button

Value	Bitmap
0	
1	

Runtime Properties:


- Visible
- Value
- Touch
- Status

17.16 Animation:

Animation is a process in which you rapidly present a series of bitmaps (frames), to create the illusion of motion. If you present the bitmaps quickly enough, and if the changes from one bitmaps to the next are not too large, an observer perceives the series as single bitmaps that is changing over time.

This object can operate in 2 different modes:

- Static: the animating frames (bitmaps) do not move (change position). This mode uses clear and draw method to display an array of bitmaps one after another in a loop. Every time the animation object is triggered by the host controller, the previous frame is cleared and the next frame is drawn at the same position creating an animating motion of bitmaps with speed controlled by the triggering rate.

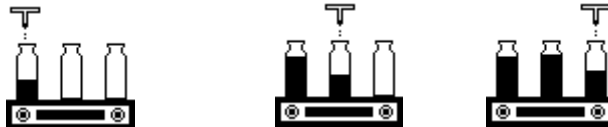

- Moving: the animating frames (bitmaps) move horizontally or vertically in 4 user defined direction: Left To Right, Right To Left, Up To Down, and Down To Up. This mode is similar to the static mode except, the next frame is drawn at a position defined by the direction of motion and the dimension of the bitmap.

Trigger	Left To Right [Persist = 1]
0	➡
1	➡ ➡
2	➡ ➡ ➡
3	➡ ➡ ➡ ➡
4	➡

Trigger	Left To Right [Persist = 0]
0	➡
1	➡
2	➡
3	➡
4	➡

Runtime Properties:

- Trigger
- Status

17.17 Chart:

Chart is used to represent data as a function of independent X variables, where each Y value provides a data point for each X value. Three charts can be added to a screen and each chart can only display one series. Chart can display data in two formats:

- XY format: The chart is updated using the X coordinate (X value) and Y coordinate (Y value) of the pixel.
- YT format: The chart is updated using the Y coordinate (Y value) of the pixel while the X value (time axis) is automatically incremented every time a new pixel is received.

The Chart can be drawn as dots (Dot Style) or as lines (Vector Style).

Also, a new object command (Array) is added to fill the chart with an array of points. See the object command section for more information on how to use this command.

Chart object can operate in two different modes:

- Digital: In this mode, the "Pixel" object command is used to update the chart. If the chart format is XY, then both X value and Y value are used to draw the pixel while, if the chart format is YT, then only the Y value is used to draw the pixel.
- Analog or "Oscilloscope Mode": Three analog inputs (AIN0, AIN1, and AIN3) and Horizontal Scanning Signal (HSS) are used to update the chart in either format. At the rising edge of HSS, the input analog signal is converted to digital using the internal 10 bits A/D converter, 4 samples are averaged and the result is scaled by 8 (ADC(AINx)) to give the Y axes a resolution of 7 bits (128 level) with dynamic input range from 0 to 5V.

If the chart format is YT, then the chart Y axes can be assigned to AIN0, AIN1 or AIN2 and Y value is calculated using the formula:

$$Y \text{ value} = \text{ADC}(\text{AIN}_{0,1,2}) * Y_{\text{max}}/128$$

X value is incremented by 1.

If the chart format is XY, then the chart Y axis can be assigned to AN1 or AN2, X axes is fixed to AIN0. Y value and X value are calculated using the following formulas:

$$Y \text{ value} = \text{ADC}(\text{AIN}_{1,2}) * Y_{\text{max}}/128$$


$$X \text{ value} = \text{ADC}(\text{AIN}_0) * X_{\text{max}}/128$$

Where:

$Y_{\text{max}} = \text{Chart Height} - 1$

$X_{\text{max}} = \text{Chart Width} - 1$

$\text{ADC}(\text{AIN}_x)$: is the result (after scaling) of the A/D converter for particular analog input (AIN_x)

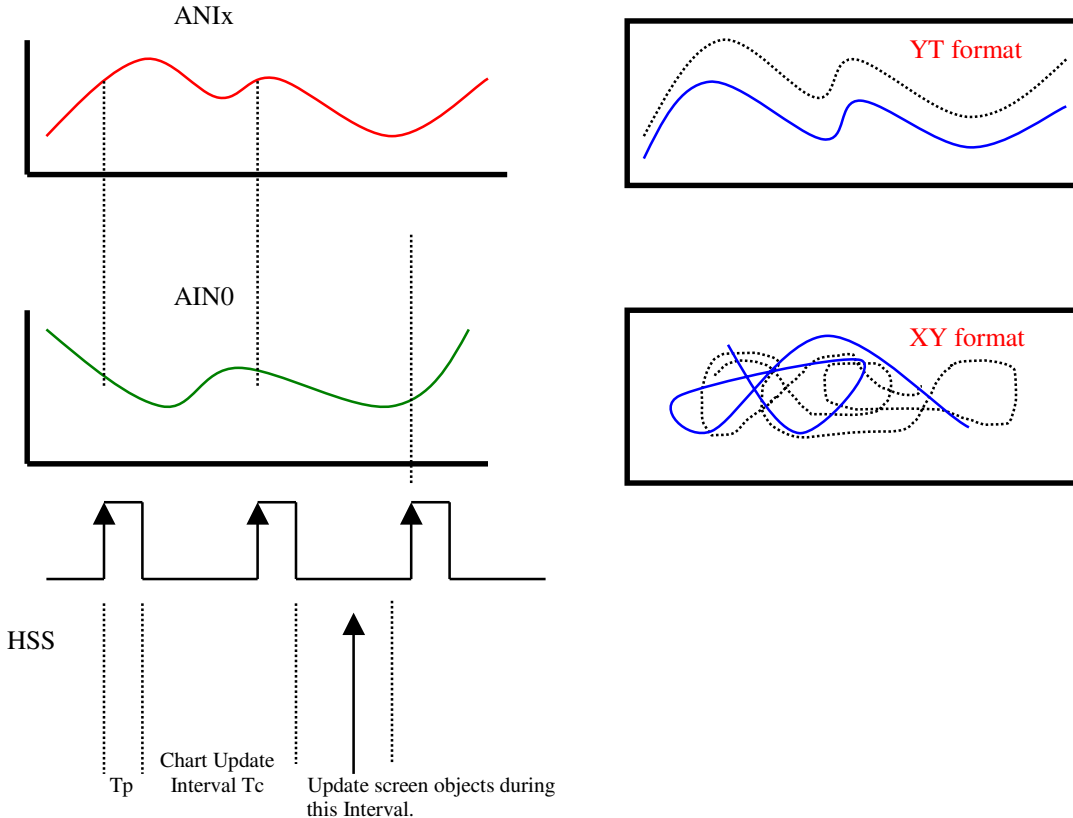

The chart update rate in the analog mode is faster than in the digital mode which is necessary for some applications like medical devices.

In analog mode, the chart update rate “ f_c ” is the frequency of HSS and is given by:

$$f_c = 1/T_c \text{ in HZ}$$

The maximum f_c value depends on Y_{max} and the number of charts. For best results, adjust HSS frequency to give you the desired performance.

HSS pulse width “ T_p ” should be from 1 to 2msec and it is recommended to update the screen objects immediately after the falling edge of HSS to avoid communication errors with the module.

Runtime Properties:

- Pixel
- Clear
- Touch
- Status

The analog input voltage must be in the range from 0V to 5.0V. A value beyond this range can cause a permanent damage to the module and/or the display.

17.18 BarGraph:

BarGraph is a valuable indicator for process control application, where the value is represented by the fill level within an outer body. The update is smooth and from left to right for horizontal orientation or from down to up for vertical orientation.



Runtime Properties:

- Value
- Visible
- Touch
- Status

17.19 NumberBox:

NumberBox is a great tool for displaying numbers. It does mimic a standard seven-segment display with up to 8 digits and three different digit sizes. The digits are user editable.

The digit sizes are:

- Small: 8X16 cell size
- Medium: 16X20 cell size
- Big: 24X40 cell size
- [Huge: 64X128 cell size](#)

12:34:45

100.34845

+125.901

The following table shows the digit bitmaps (small, medium, big or huge) and their ID numbers. They must be saved using the same sequence.

Digit bitmap	ID number	Ascii code
0	0	0x30
1	1	0x31
2	2	0x32
3	3	0x33
4	4	0x34
5	5	0x35
6	6	0x36
7	7	0x37
8	8	0x38
9	9	0x39
0.	10	
1.	11	
2.	12	
3.	13	
4.	14	
5.	15	
6.	16	
7.	17	
8.	18	
9.	19	
+	20	0x2b
-	21	0x2d
blank	22	0x20
:	23	0x3a

NumberBox uses the “Text” object command to write the number.

Example 1: To write this number (+12.78) to a numberbox

+ 1 2 . 7 8
0x2b,0x31,0x32,0x2e,0x37,0x38

Example 2: To clear a 4 digits numberbox


0x20,0x20,0x20,0x20

Runtime Properties:

- Text
- Status

17.20 LinearGage:

LinearGage is another valuable indicator for process control application, where the value is represented by moving pointer along the gage body. The pointer bitmap is user editable.

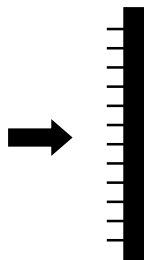


Runtime Properties:

- Visible
- Value
- Touch
- Status

17.21 Slider:

Sliders provide a visual method for numeric input. The handle bitmap is user editable. This object is typically used with the touch screen to change the value of parameter or control a process.

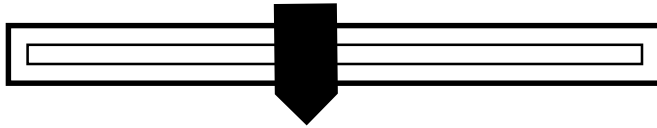

Runtime Properties:

- Visible
- Value
- Touch
- Status

18. Object Commands:

- **HighLight:**

This command is used to highlight or unhighlight text or graphics.

CMD Code	0x46
CMD format	DVID,0x04,0x46,ObjCode,ObjID,CMDByte,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number
CMDByte: Command Byte

CMDByte = 0 => Unhighlight
CMDByte = 1 => Highlight

- **Check**

This command is used to check or uncheck checkbox or radiobutton.

CMD Code	0x47
CMD format	DVID,0x04,0x47,ObjCode,ObjID,CMDByte,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number
CMDByte: Command Byte

CMDByte = 0 => Uncheck
CMDByte = 1 => Check

- **Click**

This command is used to change the state of button from click to unclick or vice versa.

CMD Code	0x4B
CMD format	DVID,0x04,0x48,ObjCode,ObjID,CMDByte,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number
CMDByte: Command Byte

CMDByte = 0 => Unclick
CMDByte = 1 => Click

- **Cursor**

This command is used to enable or disable the cursor.

CMD Code	0x48
CMD format	DVID,0x04,0x48,ObjCode,ObjID,CMDByte,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number
CMDByte: Command Byte

CMDByte = 0 => Disable
CMDByte = 1 => Enable

- **Visible:**

This command is used to show or hide an object.

CMD Code	0x4E
CMD format	DVID,0x04,0x4E,ObjCode,ObjID,CMDByte,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number
CMDByte: Command Byte

CMDByte = 0 => Hide
CMDByte = 1 => Show

- **Scroll:**

This command is used to scroll up or down.

CMD Code	0x50
CMD format	DVID,0x04,0x50,ObjCode,ObjID,CMDByte,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number
CMDByte: Command Byte

CMDByte = 0 => Scroll Up
CMDByte = 1 => Scroll Down

- **Value:**

This command is used to update an object parameter value.

CMD Code	0x51
CMD format	DVID,0x04,0x51,ObjCode,ObjID,Value,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number

Value: single byte from 0 to 255

- **Text:**

This command is used to write a text to an object.

CMD Code	0x49
CMD format	DVID,LB,0x49,ObjCode,ObjID,CHR1,CHR2CHRn,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
ObjID: Object ID number
CHR1CHRn: Ascii codes
LB = 3 + n

- **DrawStyle:**

This command is used to change the draw style of an object.

CMD Code	0x53
CMD format	DVID,0x04,0x53,ObjCode,ObjID,DrawStyleCode,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code

ObjID: Object ID number

DrawStyleCode: Draw Style Code (See drawstyle codes table)

- **FillStyle:**

This command is used to change the fill style of an object.

CMD Code	0x54
CMD format	DVID,0x04,0x54,ObjCode,ObjID,FillStyleCode,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code

ObjID: Object ID number

FillStyleCode: Fill Style Code (See fill style codes table)

- **Pixel:**

This command is used to update the chart.

CMD Code	0x55
CMD format	DVID,0x05,0x55,ObjCode,ObjID,X ,Y,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code

ObjID: Object ID number

X: X value

Y: Y value

- **Clear:**

This command is used to clear text or graphics.

CMD Code	0x4A
CMD format	DVID,0x03,0x4A,ObjCode,ObjID,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code

ObjID: Object ID number

- **Array:**

This command is used to fill the chart with an array of points. The array holds 64 (X,Y) points which can be used to fill the chart in Digital YT or Digital XY modes only. If the chart Xmax is higher than 64, then multiple Array commands are needed to fill the chart.

CMD Code	0x58
CMD format	DVID,0x85,0x58,ObjCode,ObjID, ClearChartFirst, X0 ,Y0, X1, Y1,X63, Y63 CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Chart Object Code

ObjID: Chart Object ID number

ClearChartFirst: This byte determine if you need to clear the chart and start from the chart origin or not. The first Array command must have ClearChartFirst set to “0” to clear the chart and start the filling from the chart origin. If more array commands are needed to fill the chart, the subsequent commands must have their ClearChartFirst bytes set to “1” to start the filling from the current (X,Y).

ClearChartFirst = 1 => Do not clear the chart and start filling from the current (X,Y)

ClearChartFirst = 0 => Clear the chart first and start filling from the origin (0,0)

X: X value (This value is not important in YT mode)

Y: Y value

For example: If you have a chart with Xmax = 96 (95 points are valid), then 2 array commands are needed to the fill the chart.

- **Trigger:**

This command is used to update the animation object.

CMD Code	0x52
CMD format	DVID,0x03,0x52,ObjCode,ObjID,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code

ObjID: Object ID number

- **Status:**

This command is used to read the object status.

CMD Code	0x4F
CMD format	DVID,0x03,0x4F,ObjCode,ObjID,CS
ACK format	DVID,0x06,0x01,ObjStatus,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code

ObjID: Object ID number

ObjStatus

7	6	5	4	3	2	1	0
Err	x	C	LL	UL	H	S	V

Bit0: Visible

0 = Object is not visible

1 = Object is visible

Bit1: State

0 = Object state is unclicked or unchecked

1 = Object state is clicked or checked

Bit2: Highlight

0 = Object is not highlighted

1 = Object is highlighted

Bit3: Upper Limit

0 = Object has not reached its upper limit

1 = Object has reached its upper limit

Bit4: Lower Limit

0 = Object has not reached its lower limit

1 = Object has reached its lower limit

Bit5: Cursor
 0 = Cursor is OFF
 1 = Cursor is ON

Bit6: is not used

Bit7: Error
 0 = Object error has occurred
 1 = No object error

• **Touch:**

This command is used to check if an object is being touched by the user or to scan a group of objects with the same code to check if any of them is being touched. This command returns touch status (Tstatus), touch coordinates (X,Y), touched object code and ID. If no object is being touched, touch coordinates, code and ID will read 0. To check a single object, set ObjID-start = ObjID-End = Object ID.

CMD Code	0x57
CMD format	DVID,0x04,0x57,ObjCode,ObjID-Start,ObjID-End,CS
ACK format	DVID,0x06,0x07,Tstatus,TObjCode,TObjID,TX_H,TX_L,TY_H,TY_L,CS
NAK format	DVID,0x15,CS

ObjCode: Object Code
 ObjID-Start: Objects group starting ID number
 ObjID-End: Objects group ending ID number
 TStatus: Touch Status (See Touch Screen section for more information)
 TobjCode: Touched Object Code
 TobjID: Touched Object ID number
 TX_H&TX_L: Touch X coordinate
 YT_H&TY_L: Touch Y coordinate

• **Load Screen:**

This command is used to load and display a screen.

CMD Code	0x3E
CMD format	DVID,0x02,0x3E,ScreenID,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ScreenID: Screen ID number (0 to 23)

• **Unload Screen:**

This command is used to unload and clear a screen.

CMD Code	0x3F
CMD format	DVID,0x02,0x3F,ScreenID,CS
ACK format	DVID,0x06,0x00,CS
NAK format	DVID,0x15,CS

ScreenID: Screen ID number (0 to 23)


Terminal Commands Table

Command	Code in HEX	Code in DEC
Reset	0x01	1
Set Configuration	0x05	5
Get Module Info	0x02	2
Set LCD Mode	0x06	6
Adjust Contrast	0x15	21
Adjust Brightness	0x16	22
Backlight ON/OFF	0x1C	28
Set Alarm	0x17	23
Beep	0x18	24
Clear Screen	0x0B	11
Draw Pixel	0x0C	12
Draw Line	0x0D	13
Draw Circle	0x0F	15
Draw Ellipse	0x10	16
Draw Rectangle	0x0E	14
Write Text	0x11	17
Show Bitmap	0x12	18
Config TS	0x19	25
CAL TS	0x1B	27
Get Touch Data	0x1A	26
Get CAL Constants	0x1D	29

Object Commands Table

Command	Code in HEX	Code in DEC
Highlight	0x46	70
Check	0x47	71
Click	0x4B	75
Cursor	0x48	72
Visible	0x4E	78
Scroll	0x50	80
Value	0x51	81
Text	0x49	73
DrawStyle	0x53	83
FillStyle	0x54	84
Pixel	0x55	85
Clear	0x4A	74
Trigger	0x52	82
Status	0x4F	79
Touch	0x57	87
Load Screen	0x3E	62
Unload Screen	0x3F	63

DIP-Switch settings:

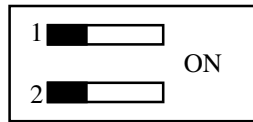

Switch 1

ON => Programming Mode

OFF => Normal Operation

Switch 2

ON => Enable EEPROM Write operations

OFF => Disable EEPROM Write operations